DIAL TEST INDICATOR UNIVERSAL HOLDER

Set the indicators at the desired attitude to the workpiece



dovetail groove



Part No. 6293-5

