


### UNIVERSAL COMPARISON MEASURING BENCH

ATTENTION: DIGITAL INDICATOR USES RECHARGEABLE BATTERY, FOR 30 HOURS CONTINUOUS WORKING

DIGITAL INDICATOR WITH IP54 DUST/WATERPROOF

DIGITAL INDICATOR USES ABSOLUTE ENCODER,
THE ORIGINAL DATA REMAINS AFTER POWER OFF



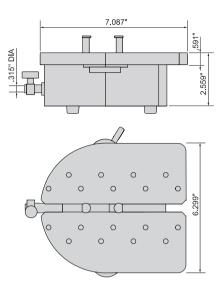

- Switchable measurement direction for measuring internal and external diameter
- Adjustable measuring force .45-1.125lbf
- Movable probe travel ±.394"
- Digital indicator with IP54 dust/waterproof (when cap is lifted, no dust/waterproof)
- Digital indicator uses absolute encoder, the original data remains after power off
- Digital indicator uses rechargeable battery, for 30 hours continuous working
- Digital indicator with automatic power off
- Digital indicator reading in digital and analog
- Digital indicator display can be rotated by 270°
- Digital indicator button function: on/off, zero setting, data preset, tolerance Go and No-Go display, data hold, mm/inch, measuring direction change, max./min./TIR, absolute/incremental measurement, data output
- Data output cable (keyboard format) is included in digital indicator

### Probes (included, supplied in pair)




Part No.	Range of external *** diameter	Range of internal** diameter	Resolution	Accuracy	Any ±.039 accuracy*	Repeatability
6848-145	0 <b>-</b> 4"(0 <b>-</b> 100mm)	1-4.7"(25-120mm)	.00002"/0.0005mm	.00020"	.00008"	.00008"

<sup>\*</sup>After set zero, accuracy is .00008" within range of ±.039" from zero position

## Internal groove probes (optional, supplied in pair)



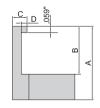


Part No.	Minimum Measuring Internal Diameter	Α	В	С	D
6848 <b>-</b> S201*	.157"	.787"	.512"	.150"	.055"
6848 <b>-</b> S202*	.276"	.945"	.709"	.236"	.087"
6848 <b>-</b> S203*	.472"	1.102"	.866"	.236"	.079"

<sup>\*</sup>It is necessary to use internal groove probe holder(part no. 6848-T201)

# Internal groove probe holders (optional, supplied in pair)





6848-T201

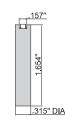




<sup>\*\*</sup>The measuring range will change according to different measuring probes

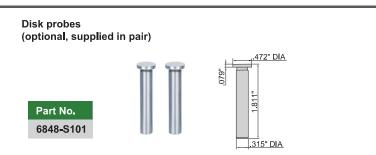

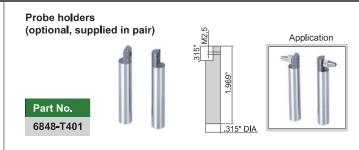

Probes (optional, supplied in single) Part no. 6282\*




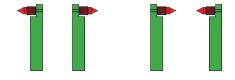


<sup>\*</sup>It is necessary to use probe holders(part no. 6848-T401) for these probes



<sup>\*</sup>It is necessary to use probe holders(part no. 6848-T401) and probe sleeve(part no. 2927-T101) for these probes

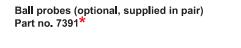

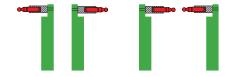

t is necessary to use probe holders(part no. 6848-T401) and probe sleeve(part no. 2927-T101) for these probes



\*It is necessary to use probe holders(part no. 6848-T401) and probe sleeve(part no. 2927-T101) for these probes

#### Internal thread probes (optional, supplied in pair) Part no. 7321\*




\*It is necessary to use probe holders(part no. 6848-T401) and probe sleeve(part no. 2927-T101) for these probes

### Spacer blocks (optional, supplied in pair)



Part No. 6848-B10



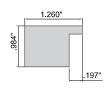

### Positioning plate(optional)



Part no. 6848-A10



